

# Assembly Instructions

## Poles and flag

- 1 Check the scope of delivery to make sure all pieces are included and not damaged.  
The delivery includes:
  - a) black textile bag including black poles and bungee rope or black straw-string bag including grey poles,
  - b) grey bungee rope used for grey poles;
  - c) concrete base;
  - d) spigot for concrete base;
  - e) flag
- 2 Stick pole segments together
- 3 Fix the bungee rope to the eyelet at the bottom of the flag
- 4 Mount the flag to the pole. Make sure the tip of the pole is fully inserted into the reinforced end of the sleeve at the top edge of the flag.
- 5 Move the flag down the pole and tighten it by fixing the bungee rope at the plastic clamp. Do not overbend the pole. You can adjust the tension of the flag by tightening the bungee rope.

## Base

- 6 The delivery includes a concrete base and spigot.
- 7 Screw the spigot into the concrete base.
- 8 Put the poles onto the spigot of the base.

## Washing, drying, ironing

Our flags are made from branded polyester and can be washed in all household washing machines at 140°F (60°C) with the addition of washing detergent. Before washing it is advisable to remove all items that could cause damage. After washing, the flag should be rinsed thoroughly. For drying, the washed sails are best hung wet or hoisted on the pole. The ironing and steaming of the flag for outdoor use is not necessary. Products for indoor use can be ironed or steamed. Do not dry clean your Bowflag®.

## WARNING

To avoid damages please only use single-sided flags on the poles.  
We cannot guarantee for the chromed parts remaining rust-free if used outdoor.

